

## Core Overview

The Interval Timer core with Avalon® interface is an interval timer for Avalon-based processor systems, such as a Nios® II processor system. The core provides the following features:

- 32-bit and 64-bit counters.
- Controls to start, stop, and reset the timer.
- Two count modes: count down once and continuous count-down.
- Count-down period register.
- Option to enable or disable the interrupt request (IRQ) when timer reaches zero.
- Optional watchdog timer feature that resets the system if timer ever reaches zero.
- Optional periodic pulse generator feature that outputs a pulse when timer reaches zero.
- Compatible with 32-bit and 16-bit processors.


Device drivers are provided in the HAL system library for the Nios II processor. The interval timer core is SOPC Builder-ready and integrates easily into any SOPC Builder-generated system. This chapter contains the following sections:

- [“Functional Description”](#)
- [“Device Support” on page 24–2](#)
- [“Instantiating the Core in SOPC Builder” on page 24–3](#)
- [“Software Programming Model” on page 24–5](#)

## Functional Description

Figure 24–1 shows a block diagram of the interval timer core.

**Figure 24–1.** Interval Timer Core Block Diagram

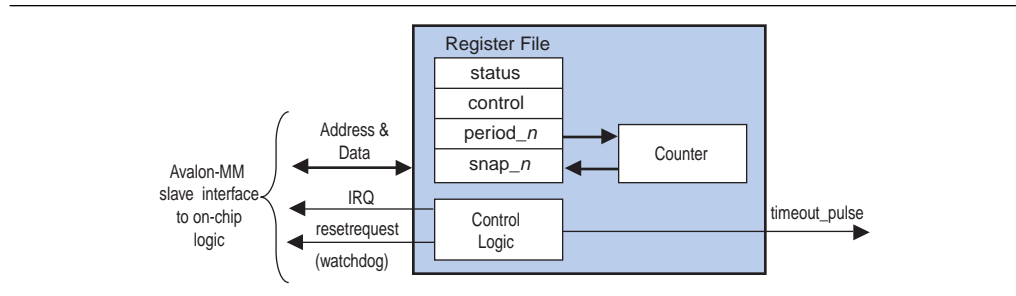

The interval timer core has two user-visible features:

- The Avalon Memory-Mapped (Avalon-MM) interface that provides access to six 16-bit registers
- An optional pulse output that can be used as a periodic pulse generator

All registers are 16-bits wide, making the core compatible with both 16-bit and 32-bit processors. Certain registers only exist in hardware for a given configuration. For example, if the core is configured with a fixed period, the period registers do not exist in hardware.

The following sequence describes the basic behavior of the interval timer core:

- An Avalon-MM master peripheral, such as a Nios II processor, writes the core's `control` register to perform the following tasks:
  - Start and stop the timer
  - Enable/disable the IRQ
  - Specify count-down once or continuous count-down mode
- A processor reads the `status` register for information about current timer activity.
- A processor can specify the timer period by writing a value to the period registers.
- An internal counter counts down to zero, and whenever it reaches zero, it is immediately reloaded from the period registers.
- A processor can read the current counter value by first writing to one of the `snap` registers to request a coherent snapshot of the counter, and then reading the `snap` registers for the full value.
- When the count reaches zero, one or more of the following events are triggered:
  - If IRQs are enabled, an IRQ is generated.
  - The optional pulse-generator output is asserted for one clock period.
  - The optional watchdog output resets the system.

## Avalon-MM Slave Interface

The interval timer core implements a simple Avalon-MM slave interface to provide access to the register file. The Avalon-MM slave port uses the `resetrequest` signal to implement watchdog timer behavior. This signal is a non-maskable reset signal, and it drives the reset input of all Avalon-MM peripherals in the SOPC Builder system. When the `resetrequest` signal is asserted, it forces any processor connected to the system to reboot. For more information, refer to [“Configuring the Timer as a Watchdog Timer” on page 24-4](#).

## Device Support

The interval timer core supports all Altera® device families.

## Instantiating the Core in SOPC Builder

Use the MegaWizard™ Interface for the interval timer core in SOPC Builder to specify the hardware features. This section describes the options available in the MegaWizard Interface.

### Timeout Period

The **Timeout Period** setting determines the initial value of the period registers. When the **Writeable period** option is on, a processor can change the value of the period by writing to the period registers. When the **Writeable period** option is off, the period is fixed and cannot be updated at runtime. See [“Hardware Options” on page 24-3](#) for information on register options.

The **Timeout Period** is an integer multiple of the **Timer Frequency**. The **Timer Frequency** is fixed at the frequency setting of the system clock associated with the timer. The **Timeout Period** setting can be specified in units of **µs** (microseconds), **ms** (milliseconds), **seconds**, or **clocks** (number of cycles of the system clock associated with the timer). The actual period depends on the frequency of the system clock associated with the timer. If the period is specified in **µs**, **ms**, or **seconds**, the true period will be the smallest number of clock cycles that is greater or equal to the specified **Timeout Period** value. For example, if the associated system clock has a frequency of 30 **ns**, and the specified **Timeout Period** value is 1 **µs**, the true timeout period will be 1.020 microseconds.

### Counter Size

The **Counter Size** setting determines the timer’s width, which can be set to either 32 or 64 bits. A 32-bit timer has two 16-bit period registers, whereas a 64-bit timer has four 16-bit period registers. This option applies to the snap registers as well.

### Hardware Options

The following options affect the hardware structure of the interval timer core. As a convenience, the **Preset Configurations** list offers several pre-defined hardware configurations, such as:

- **Simple periodic interrupt**—This configuration is useful for systems that require only a periodic IRQ generator. The period is fixed and the timer cannot be stopped, but the IRQ can be disabled.
- **Full-featured**—This configuration is useful for embedded processor systems that require a timer with variable period that can be started and stopped under processor control.
- **Watchdog**—This configuration is useful for systems that require watchdog timer to reset the system in the event that the system has stopped responding. Refer to [“Configuring the Timer as a Watchdog Timer” on page 24-4](#).

## Register Options

Table 24-1 shows the settings that affect the interval timer core's registers.

**Table 24-1.** Register Options

Option	Description
Writeable period	When this option is enabled, a master peripheral can change the count-down period by writing to the period registers. When disabled, the count-down period is fixed at the specified <b>Timeout Period</b> , and the period registers do not exist in hardware.
Readable snapshot	When this option is enabled, a master peripheral can read a snapshot of the current count-down. When disabled, the status of the counter is detectable only via other indicators, such as the <code>status</code> register or the IRQ signal. In this case, the snap registers do not exist in hardware, and reading these registers produces an undefined value.
Start/Stop control bits	When this option is enabled, a master peripheral can start and stop the timer by writing the START and STOP bits in the <code>control</code> register. When disabled, the timer runs continuously. When the <b>System reset on timeout (watchdog)</b> option is enabled, the START bit is also present, regardless of the <b>Start/Stop control bits</b> option.

## Output Signal Options

Table 24-2 shows the settings that affect the interval timer core's output signals.

**Table 24-2.** Output Signal Options

Option	Description
Timeout pulse (1 clock wide)	When this option is on, the core outputs a signal <code>timeout_pulse</code> . This signal pulses high for one clock cycle whenever the timer reaches zero. When this option is off, the <code>timeout_pulse</code> signal does not exist.
System reset on timeout (watchdog)	When this option is on, the core's Avalon-MM slave port includes the <code>resetrequest</code> signal. This signal pulses high for one clock cycle whenever the timer reaches zero resulting in a system-wide reset. The internal timer is stopped at reset. Explicitly writing the START bit of the <code>control</code> register starts the timer.  When this option is off, the <code>resetrequest</code> signal does not exist.  Refer to "Configuring the Timer as a Watchdog Timer".

## Configuring the Timer as a Watchdog Timer

To configure the core for use as a watchdog, in the MegaWizard Interface select **Watchdog** in the **Preset Configurations** list, or choose the following settings:

- Set the **Timeout Period** to the desired "watchdog" period.
- Turn off **Writeable period**.
- Turn off **Readable snapshot**.
- Turn off **Start/Stop control bits**.
- Turn off **Timeout pulse**.
- Turn on **System reset on timeout (watchdog)**.

A watchdog timer wakes up (comes out of reset) stopped. A processor later starts the timer by writing a 1 to the `control` register's `START` bit. Once started, the timer can never be stopped. If the internal counter ever reaches zero, the watchdog timer resets the system by generating a pulse on its `resetrequest` output. To prevent the system from resetting, the processor must periodically reset the timer's count-down value by writing one of the period registers (the written value is ignored). If the processor fails to access the timer because, for example, software stopped executing normally, the watchdog timer resets the system and returns the system to a defined state.

## Software Programming Model

The following sections describe the software programming model for the interval timer core, including the register map and software declarations to access the hardware. For Nios II processor users, Altera provides hardware abstraction layer (HAL) system library drivers that enable you to access the interval timer core using the HAL application programming interface (API) functions.

### HAL System Library Support

The Altera-provided drivers integrate into the HAL system library for Nios II systems. When possible, HAL users should access the core via the HAL API, rather than accessing the core's registers directly.

Altera provides a driver for both the HAL timer device models: system clock timer, and timestamp timer.

#### System Clock Driver

When configured as the system clock, the interval timer core runs continuously in periodic mode, using the default period set in SOPC builder. The system clock services are then run as a part of the interrupt service routine for this timer. The driver is interrupt-driven, and therefore must have its interrupt signal connected in the system hardware.

The Nios II integrated development environment (IDE) allows you to specify system library properties that determine which timer device will be used as the system clock timer.


#### Timestamp Driver

The interval timer core may be used as a timestamp device if it meets the following conditions:

- The timer has a writeable `period` register, as configured in SOPC Builder.
- The timer is not selected as the system clock.

The Nios II IDE allows you to specify system library properties that determine which timer device will be used as the timestamp timer.

If the timer hardware is not configured with writeable `period` registers, calls to the `alt_timestamp_start()` API function will not reset the timestamp counter. All other HAL API calls will perform as expected.

 For more information about using the system clock and timestamp features that use these drivers, refer to the *Nios II Software Developer's Handbook*. The Nios II Embedded Design Suite (EDS) also provides several example designs that use the interval timer core.

### Limitations

The HAL driver for the interval timer core does not support the watchdog reset feature of the core.

## Software Files

The interval timer core is accompanied by the following software files. These files define the low-level interface to the hardware, and provide the HAL drivers. Application developers should not modify these files.

- **altera\_avalon\_timer\_regs.h**—This file defines the core's register map, providing symbolic constants to access the low-level hardware.
- **altera\_avalon\_timer.h, altera\_avalon\_timer\_sc.c, altera\_avalon\_timer\_ts.c, altera\_avalon\_timer\_vars.c**—These files implement the timer device drivers for the HAL system library.

## Register Map

You do not need to access the interval timer core directly via its registers if using the standard features provided in the HAL system library for the Nios II processor. In general, the register map is only useful to programmers writing a device driver.



The Altera-provided HAL device driver accesses the device registers directly. If you are writing a device driver, and the HAL driver is active for the same device, your driver will conflict and fail to operate correctly.

Table 24-3 shows the register map for the 32-bit timer.

**Table 24-3.** Register Map—32-bit Timer

Offset	Name	R/W	Description of Bits						
			15	...	4	3	2	1	0
0	status	RW	(1)				RUN	TO	
1	control	RW	(1)		STOP	START	CONT	ITO	
2	periodl	RW	Timeout Period – 1 (bits [15:0])						
3	periodh	RW	Timeout Period – 1 (bits [31:16])						
4	snapl	RW	Counter Snapshot (bits [15:0])						
5	snaph	RW	Counter Snapshot (bits [31:16])						

**Note to Table 24-3:**

(1) Reserved. Read values are undefined. Write zero.

Table 24-4 shows the register map for the 64-bit timer.

**Table 24-4.** Register Map—64-bit Timer

Offset	Name	R/W	Description of Bits						
			15	...	4	3	2	1	0
0	status	RW	(1)				RUN	TO	
1	control	RW	(1)		STOP	START	CONT	ITO	
2	period_0	RW	Timeout Period – 1 (bits [15:0])						
3	period_1	RW	Timeout Period – 1 (bits [31:16])						
4	period_2	RW	Timeout Period – 1 (bits [47:32])						
5	period_3	RW	Timeout Period – 1 (bits [63:48])						
6	snap_0	RW	Counter Snapshot (bits [15:0])						
7	snap_1	RW	Counter Snapshot (bits [31:16])						
8	snap_2	RW	Counter Snapshot (bits [47:32])						
9	snap_3	RW	Counter Snapshot (bits [63:48])						

**Note to Table 24-4:**

(1) Reserved. Read values are undefined. Write zero.

### status Register

The status register has two defined bits, as shown in Table 24-5.

**Table 24-5.** status Register Bits

Bit	Name	R/W/C	Description
0	TO	RC	The TO (timeout) bit is set to 1 when the internal counter reaches zero. Once set by a timeout event, the TO bit stays set until explicitly cleared by a master peripheral. Write zero to the status register to clear the TO bit.
1	RUN	R	The RUN bit reads as 1 when the internal counter is running; otherwise this bit reads as 0. The RUN bit is not changed by a write operation to the status register.

### control Register

The control register has four defined bits, as shown in Table 24-6.

**Table 24-6.** control Register Bits (Part 1 of 2)

Bit	Name	R/W/C	Description
0	ITO	RW	If the ITO bit is 1, the interval timer core generates an IRQ when the status register's TO bit is 1. When the ITO bit is 0, the timer does not generate IRQs.
1	CONT	RW	The CONT (continuous) bit determines how the internal counter behaves when it reaches zero. If the CONT bit is 1, the counter runs continuously until it is stopped by the STOP bit. If CONT is 0, the counter stops after it reaches zero. When the counter reaches zero, it reloads with the value stored in the period registers, regardless of the CONT bit.
2	START (1)	W	Writing a 1 to the START bit starts the internal counter running (counting down). The START bit is an event bit that enables the counter when a write operation is performed. If the timer is stopped, writing a 1 to the START bit causes the timer to restart counting from the number currently stored in its counter. If the timer is already running, writing a 1 to START has no effect. Writing 0 to the START bit has no effect.

**Table 24-6.** control Register Bits (Part 2 of 2)

Bit	Name	R/W/C	Description
3	STOP (1)	W	Writing a 1 to the STOP bit stops the internal counter. The STOP bit is an event bit that causes the counter to stop when a write operation is performed. If the timer is already stopped, writing a 1 to STOP has no effect. Writing a 0 to the stop bit has no effect. If the timer hardware is configured with <b>Start/Stop control bits</b> off, writing the STOP bit has no effect.

**Note to Table 24-6:**

(1) Writing 1 to both START and STOP bits simultaneously produces an undefined result.

**period\_n Registers**

The `period_n` registers together store the timeout period value. The internal counter is loaded with the value stored in these registers whenever one of the following occurs:

- A write operation to one of the `period_n` register
- The internal counter reaches 0

The timer's actual period is one cycle greater than the value stored in the `period_n` registers because the counter assumes the value zero for one clock cycle.

Writing to one of the `period_n` registers stops the internal counter, except when the hardware is configured with **Start/Stop control bits** off. If **Start/Stop control bits** is off, writing either register does not stop the counter. When the hardware is configured with **Writeable period** disabled, writing to one of the `period_n` registers causes the counter to reset to the fixed **Timeout Period** specified at system generation time.

**snap\_n Registers**

A master peripheral may request a coherent snapshot of the current internal counter by performing a write operation (write-data ignored) to one of the `snap_n` registers. When a write occurs, the value of the counter is copied to `snap_n` registers. The snapshot occurs whether or not the counter is running. Requesting a snapshot does not change the internal counter's operation.

**Interrupt Behavior**

The interval timer core generates an IRQ whenever the internal counter reaches zero and the ITO bit of the control register is set to 1. Acknowledge the IRQ in one of two ways:

- Clear the TO bit of the status register
- Disable interrupts by clearing the ITO bit of the control register

Failure to acknowledge the IRQ produces an undefined result.

**Referenced Documents**


This chapter references the *Nios II Software Developer's Handbook*.

## Document Revision History

Table 24-7 shows the revision history for this chapter.

**Table 24-7.** Document Revision History

<b>Date and Document Version</b>	<b>Changes Made</b>	<b>Summary of Changes</b>
March 2009 v9.0.0	No change from previous release.	—
November 2008 v8.1.0	Changed to 8-1/2 x 11 page size. Updated the core's name to reflect the name used in SOPC Builder.	—
May 2008 v8.0.0	Added a new parameter and register map for the 64-bit timer.	Updates made to comply with the Quartus II software version 8.0 release.

 For previous versions of the *Quartus II Handbook*, refer to the [Quartus II Handbook Archive](#).

